


UNFOLDING YOUR NOMAD CART

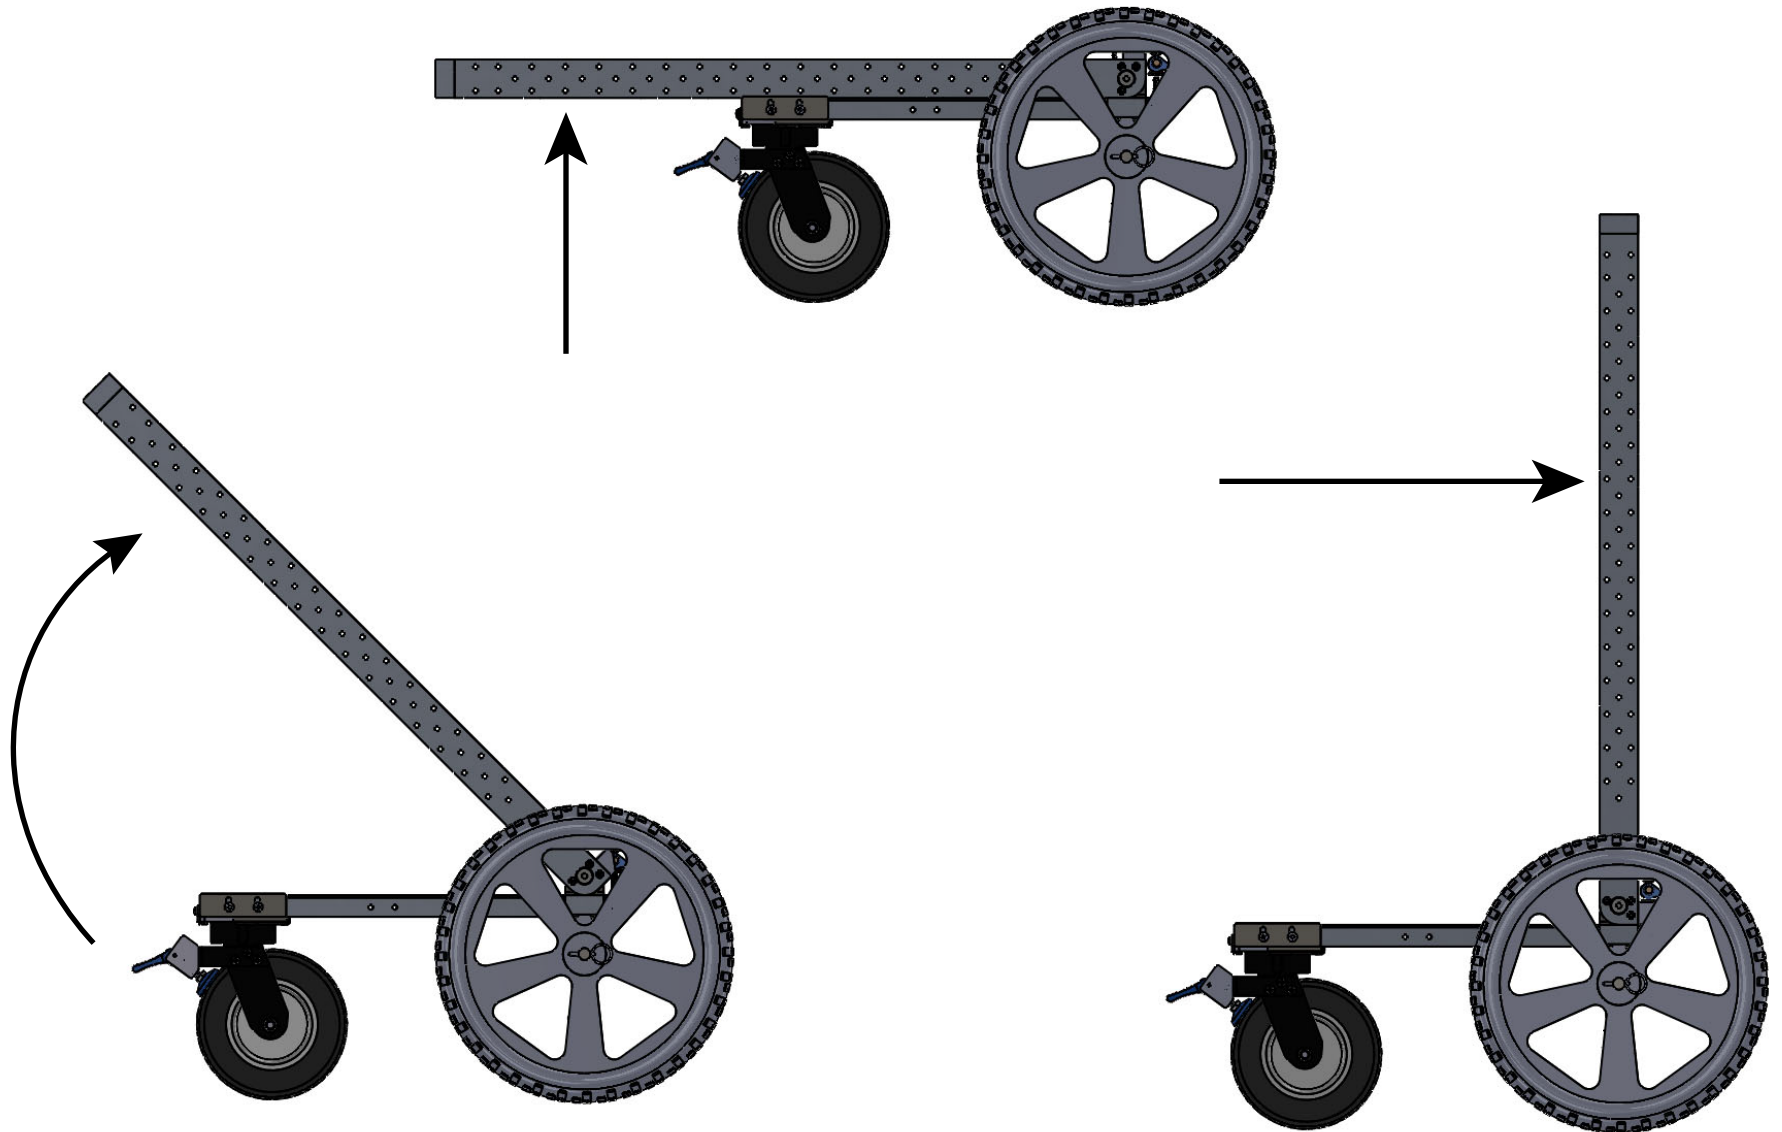

FRONT WHEEL INSTALLATION ON NEBTEK FOLDING NOMAD CART

TOOLS NEEDED

No. 3 Phillips Screwdriver


INSTRUCTIONS

1. Loosen the 2 screws on the Side Stop.
2. Slide the Wheel Mounting plate inside the Wheel Support brackets.
3. Slide the Side stop to the other side of the slots and tighten down the two screws.
4. Repeat for the other side front wheel.

NOTES

Shown from under side, the mounting procedure works tilted back in the right side up position just as easily.


Some wheels may require tapping in with a rubber mallet.

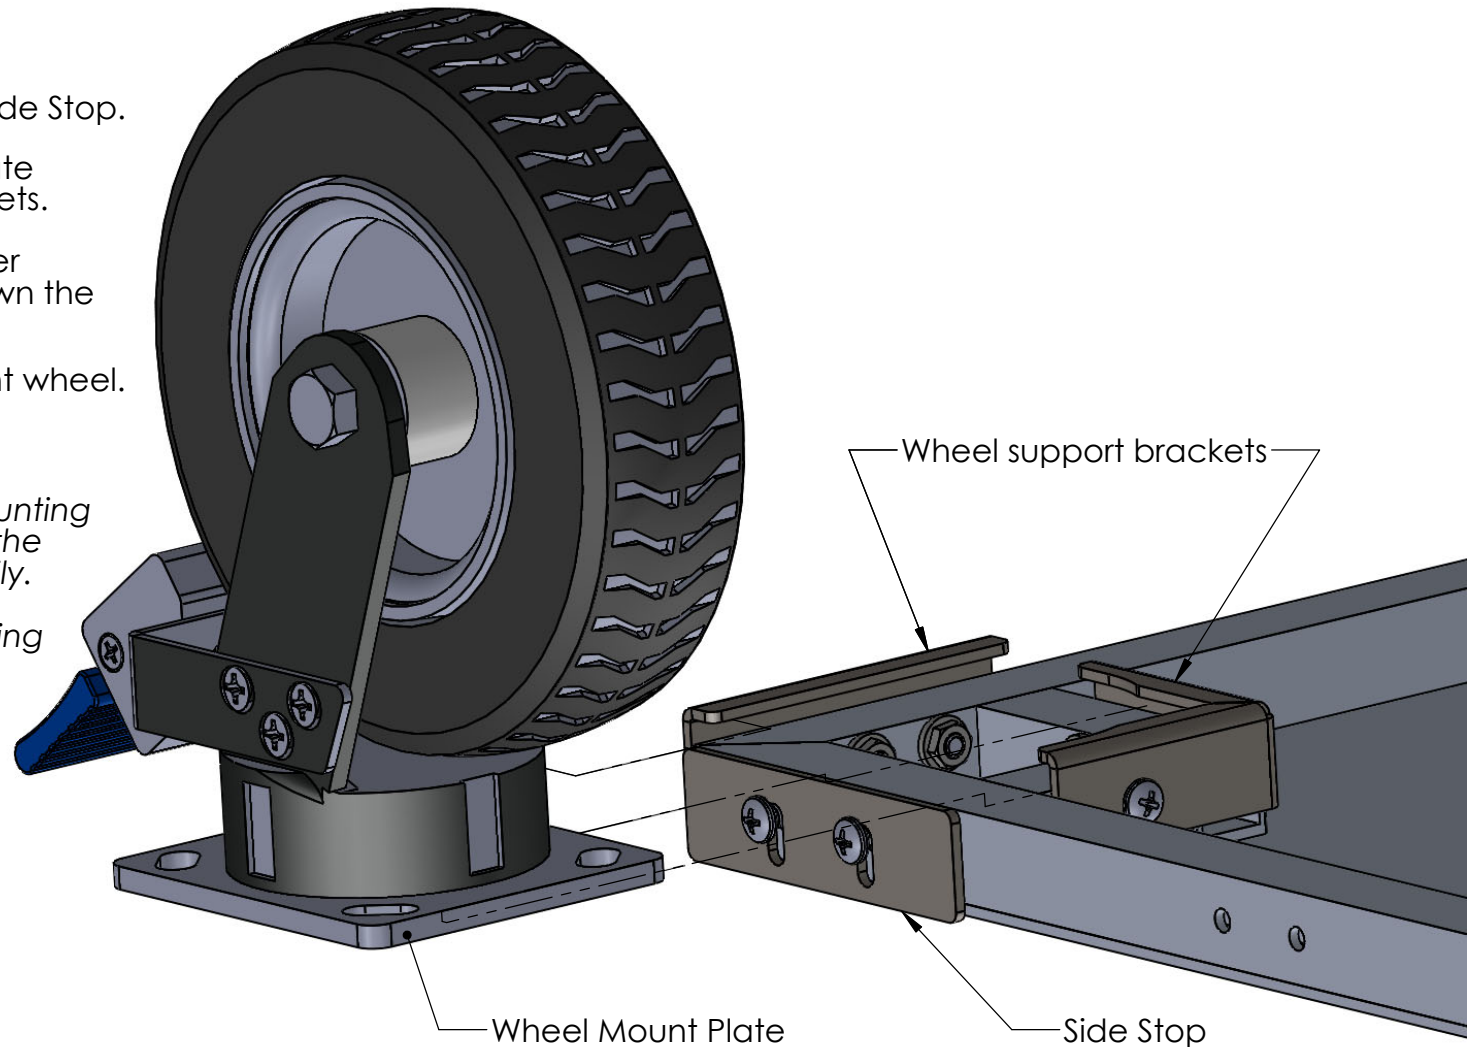



NOMAD REAR WHEEL ASSEMBLY

INSTRUCTIONS



1. PUSH AXLE THROUGH AXLE PLATE ON EACH SIDE
2. USE THE HAIRPINS IN THE INSIDE HOLES.
3. PUT ON THE WHEEL SPACERS
4. USE THE QUICK RELEASE PINS ON THE OUTSIDE HOLES

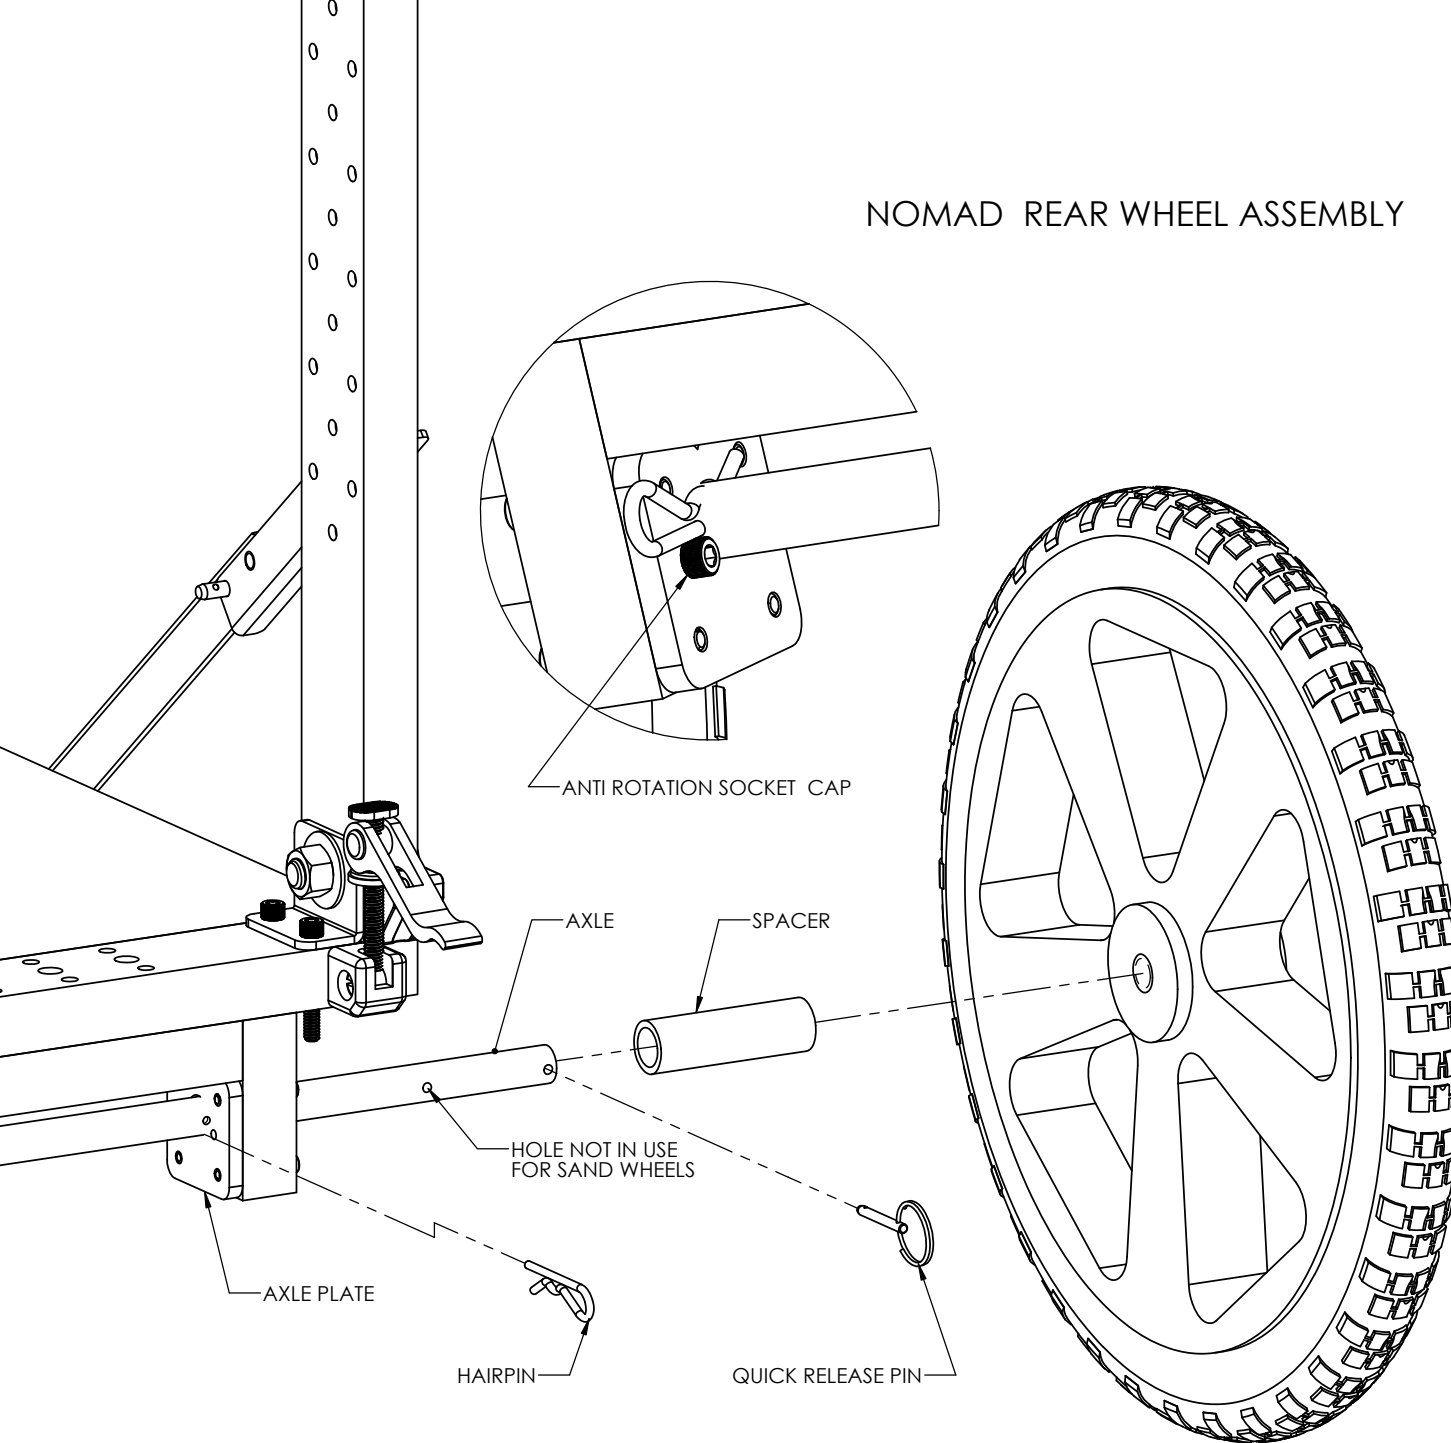


INSTALLING AXLE AND WHEELS

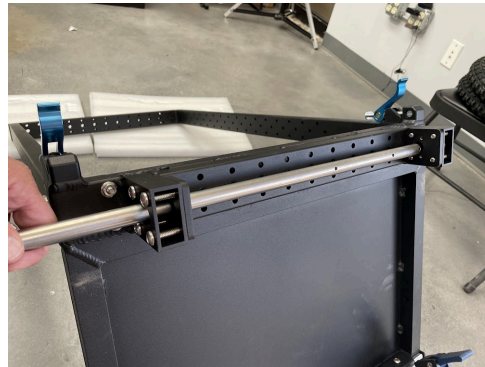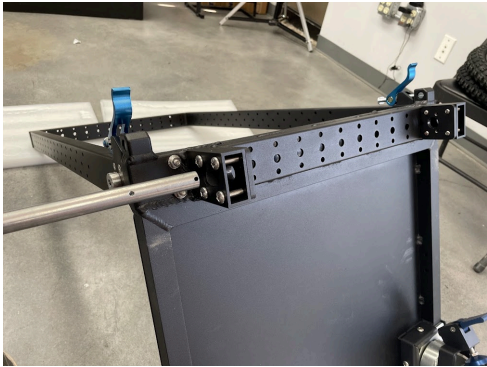


- Slide axle through axle holes located at the back and bottom of the cart.

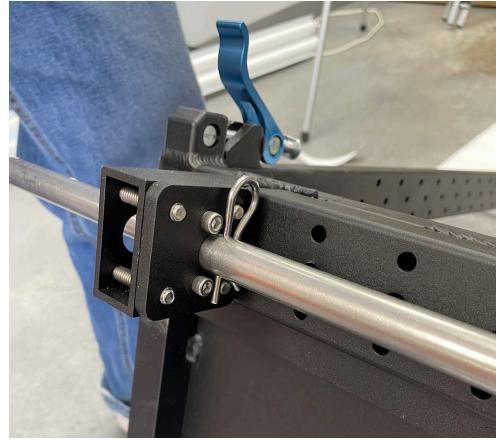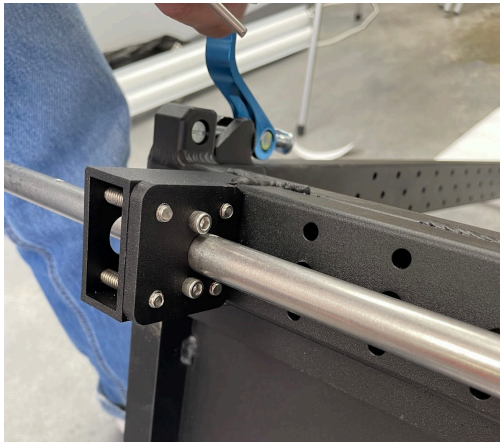

- Locate the guide pins to install the first R-Clip. Install the R-Clip with the "R" facing away from the guide pins.

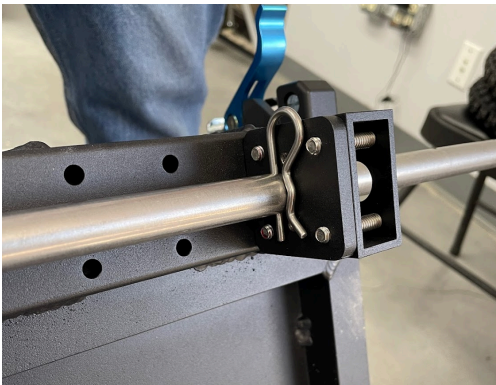


- Install the second cotter pin on the opposite side. This pin can be install facing up or down.

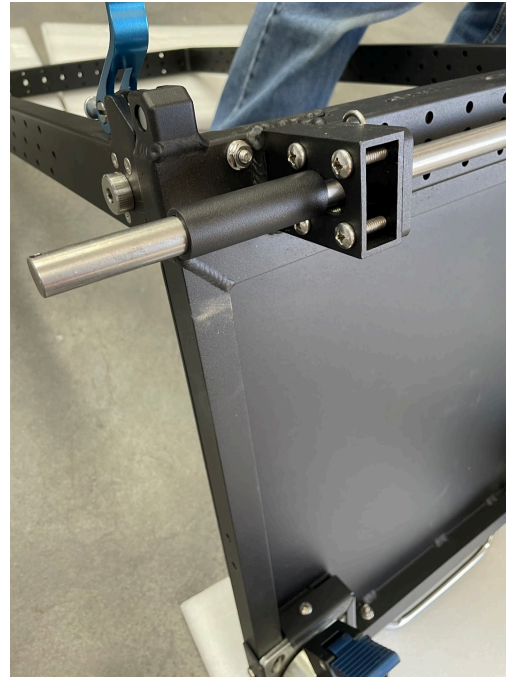

- Slide long black spacers onto each side of the axle.



- Lastly, insert small pins on the outside of the wheels to hold them in place. This may require a rubber mallet.

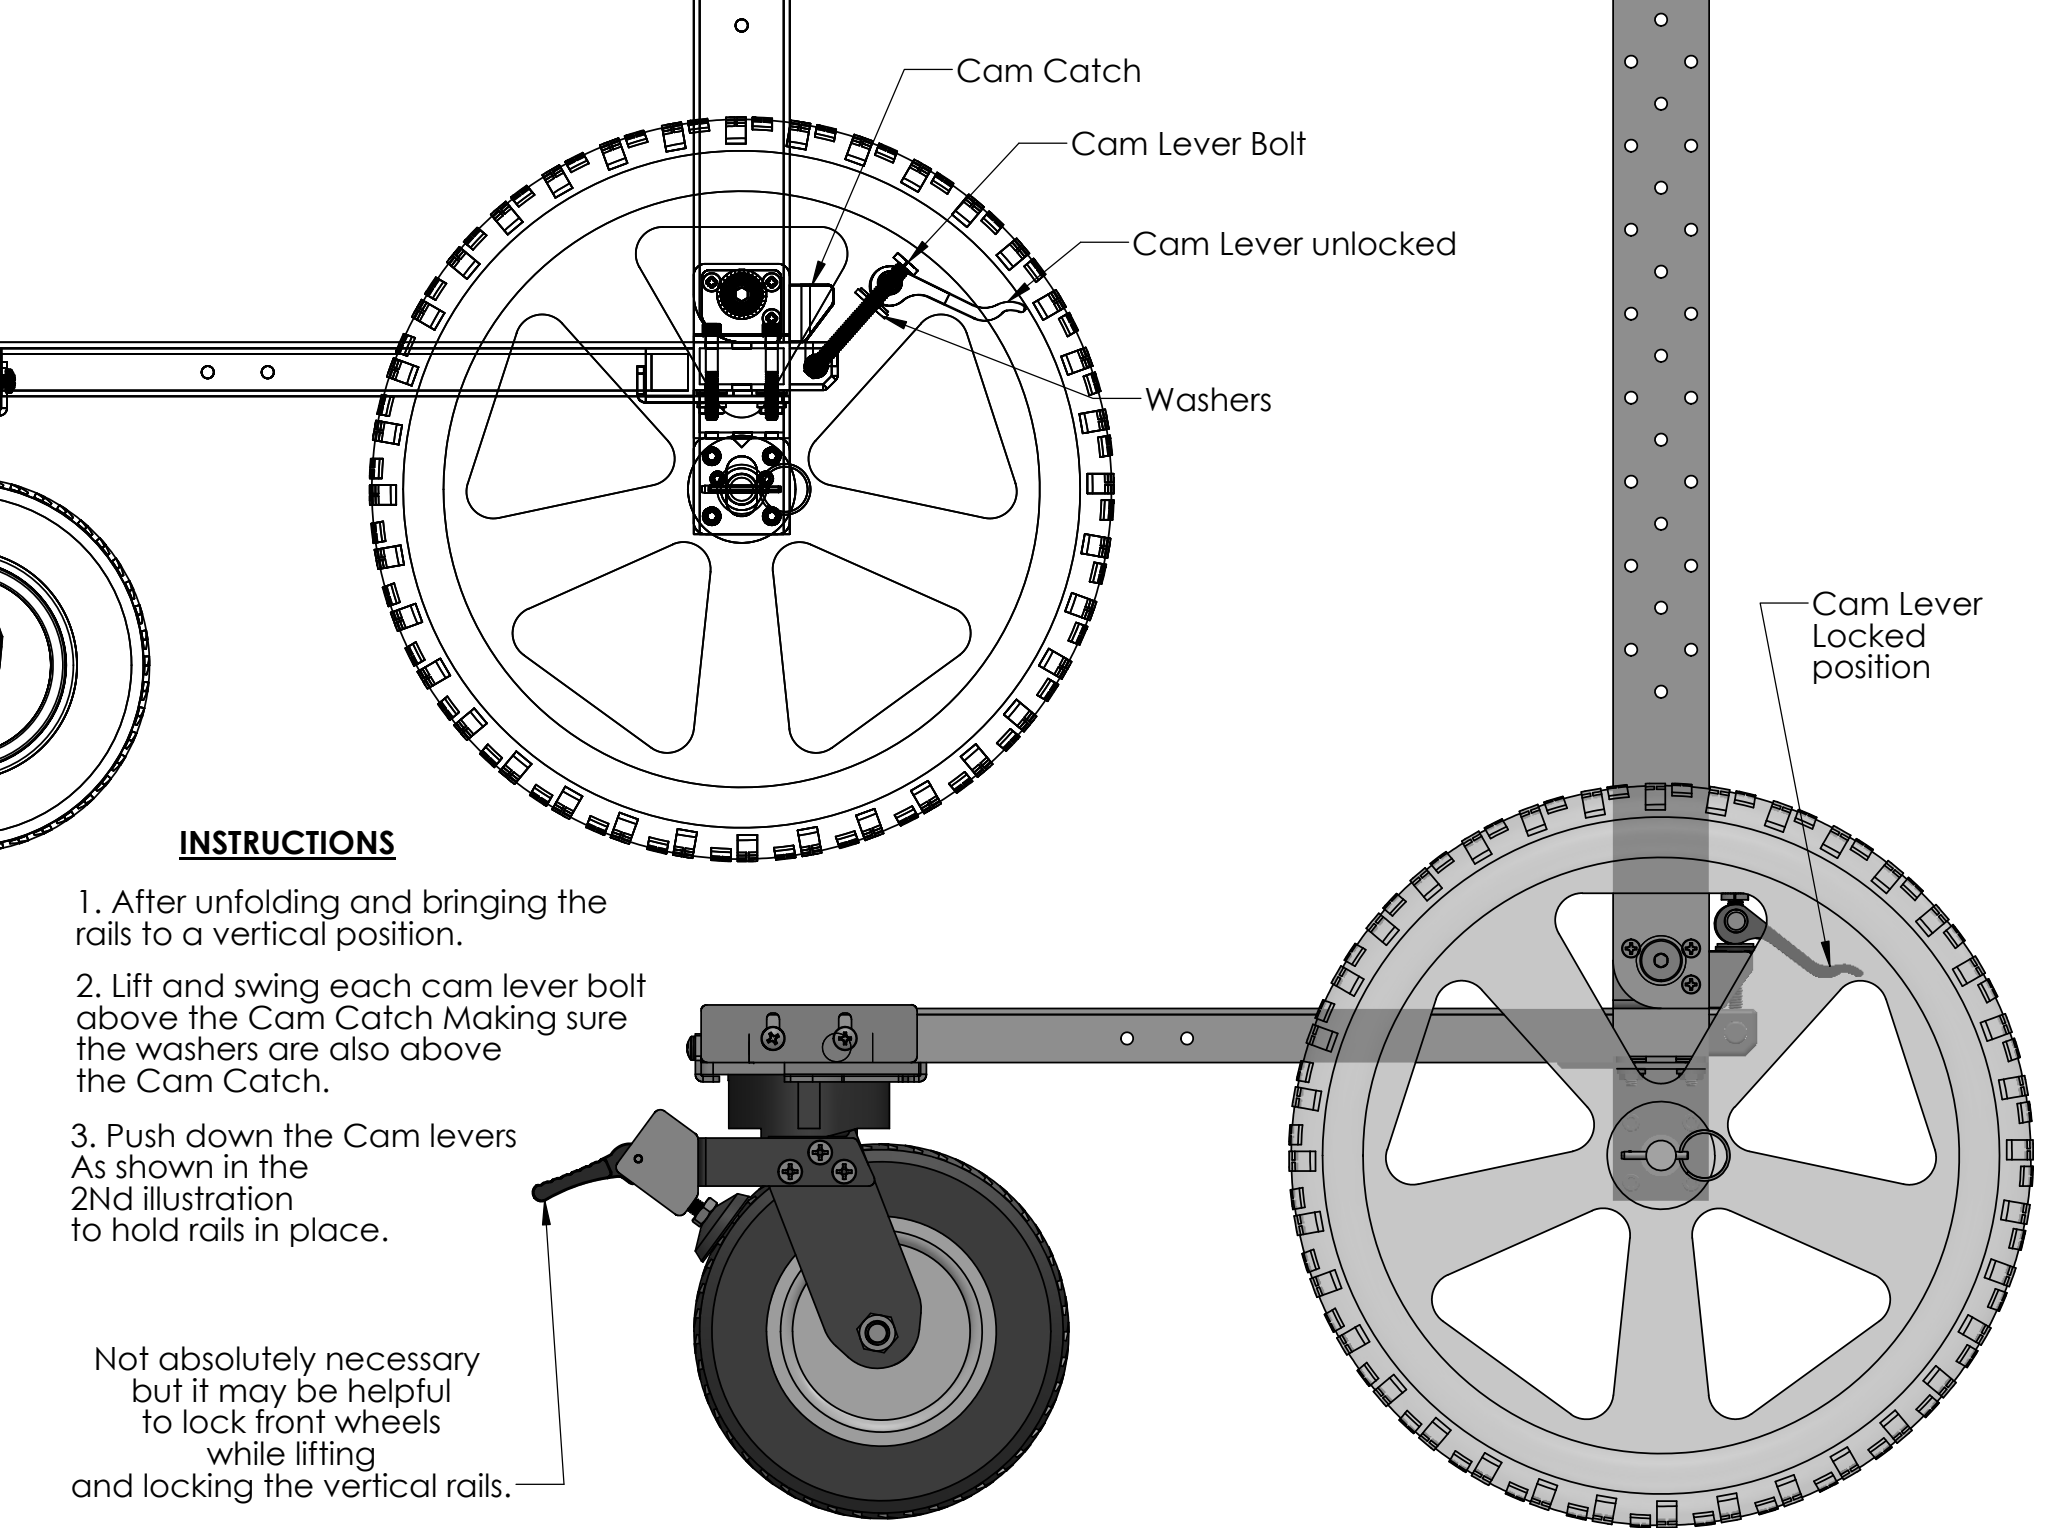


ATTACHING THE HANDLES

TOOLS NEEDED

3/16" hex Allen wrench

7/16" open end wrench

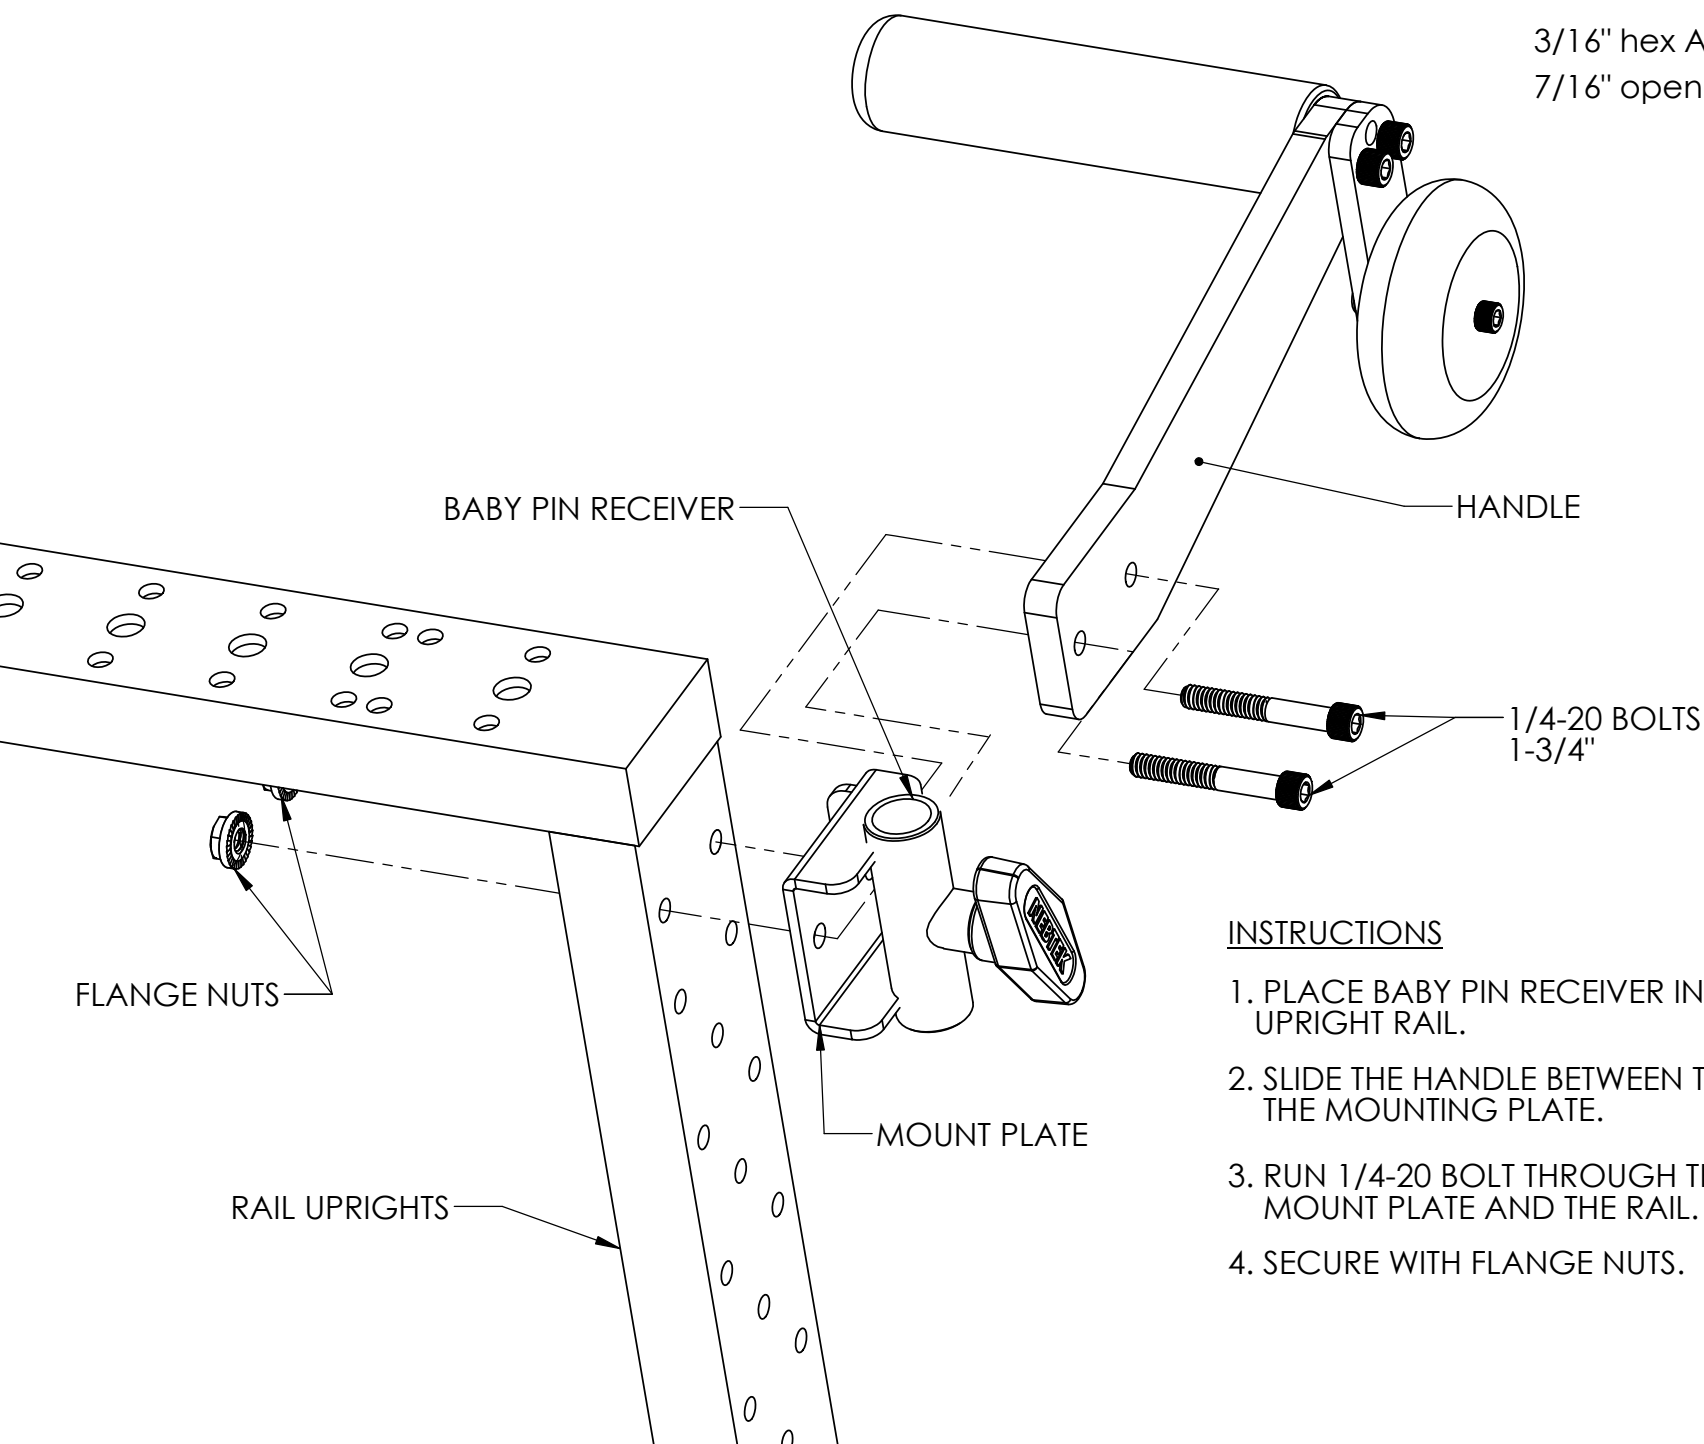

INSTRUCTIONS

1. PLACE BABY PIN RECEIVER IN PLACE AGAINST UPRIGHT RAIL.
2. SLIDE THE HANDLE BETWEEN THE RECEIVER AND THE MOUNTING PLATE.
3. RUN 1/4-20 BOLT THROUGH THE HANDLE, THE MOUNT PLATE AND THE RAIL.
4. SECURE WITH FLANGE NUTS.


7 RU ASSEMBLY INSTRUCTION SHEET

Tools needed:

#2 Phillips Screwdriver

3/16" Allen Wrench

7/16" open end wrench

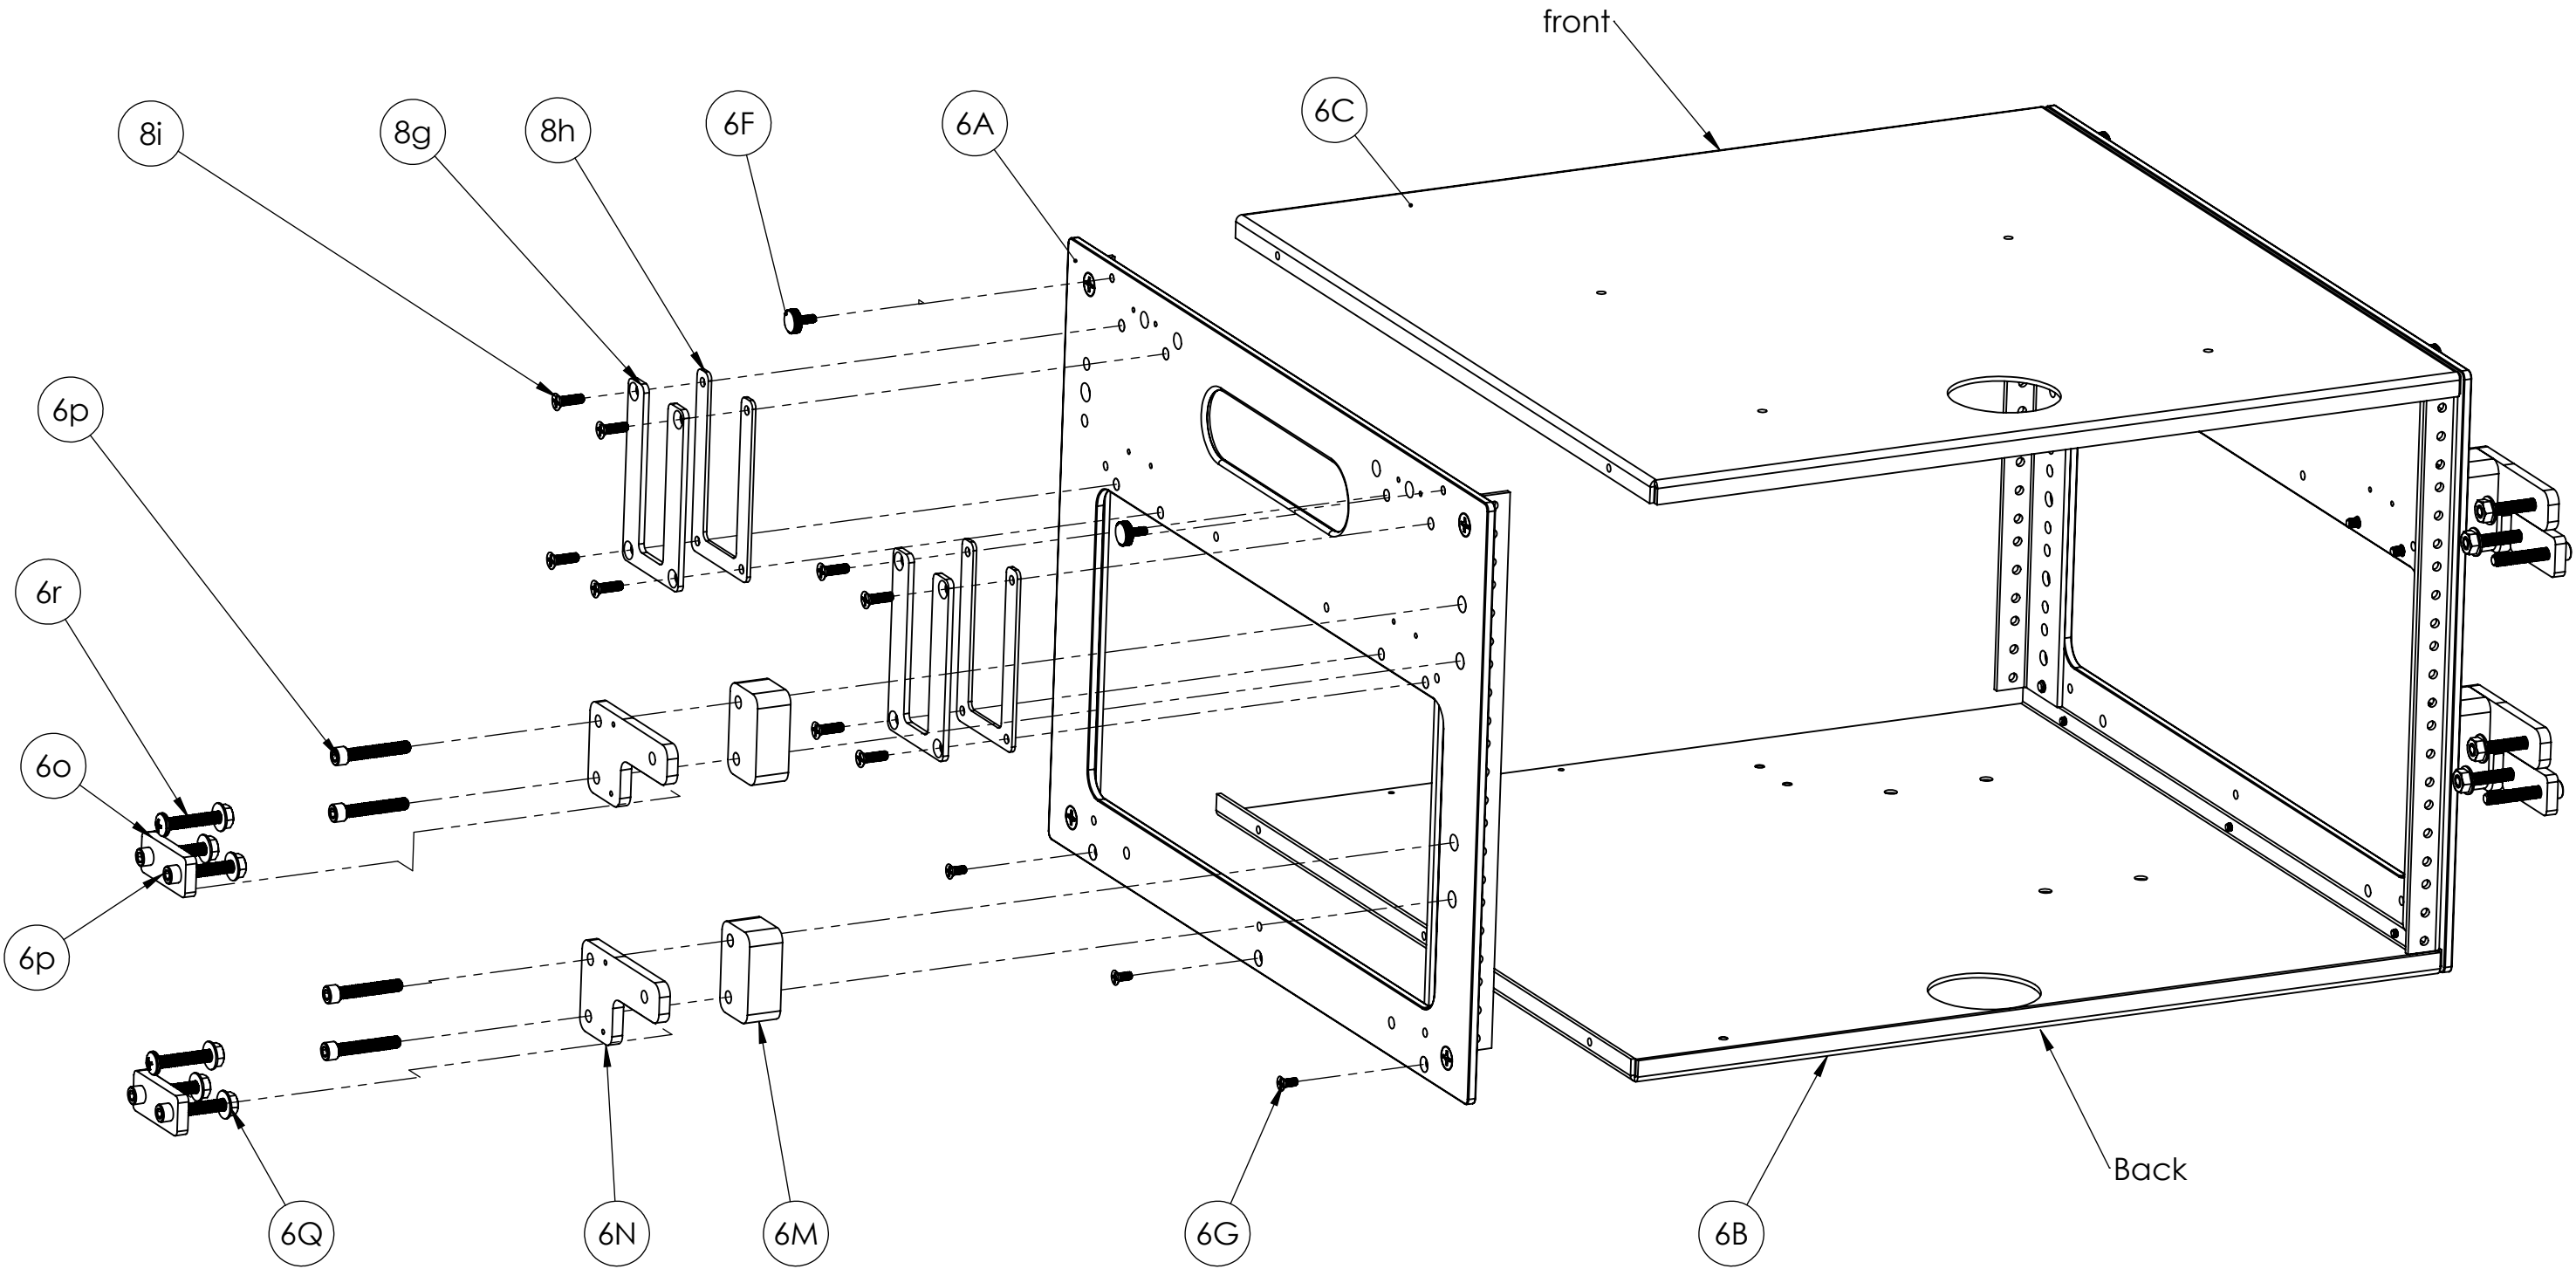

IN THE BOX:

ITEM	Part name	DISCRIPTION	QUANTITY
6A	7RU SIDE	Custom with rack Rail	2
6B	7RU Bottom	Custom carpeted t	1
6C	7RU Top	Custom Carpeted	1
6G	Bottom screws	Phillips Flat Head Screws, 8-32 Thread Size, 3/8" Long	6
6F	Top Thumb screws	8-32 w/knurld cap	4
6M	mounting pin spacer	thick rectangle shape	4
6N	Mounting Pin Bracket	T or L shape Plate*	4
6P	Screw for mounting pin bracket	Socket Head Screw, 1/4"-20 Thread Size, 1-1/2" Long	8
6R	Screw to attach 7RU BoX TO Nomad Cart Frame	Pan Head Phillips Screw, 1/4"-20 Thread, 1-1/2" Long	2
6o	Guide Plate	Rectangle for	4
6Q	Steel Flange Nut	1/4"-20 Thread Size	10
8H*	Folding table seat	U shaped plate	4
8G*	Folding table guide	U shaped plate counter sink screw holes	4
8i*	Screws for folding table	Phillips Flat Undercut Head Screws, Passivated, 10-32 Thread Size, 5/8" Long	16

Step 1. Attach side (part 6A) to bottom (part 6B) using screws 6G

Step 2. Repeat with the other side

Step 3. Screw in thumb screws (part 6F) thru sides into the top (part 6C) each side

Step 4. Using bolt 6P attach pin plate (part 6N) and spacer (part 6M) to each side (parts 6A)

If folding side table option was ordered otherwise skip step 5

Step 5. Attach parts 8G and 8h with screws 8i

Congratulations you have a built 7 Rack unit shelf ready to mount on the Nomad cart

Step 6. Locate a position where you would like your 7RU on the Cart Frame and attach Guide plate (parts 6o) using bolt 6P and Nut 6Q

They go under the mounts to help position filled rack.

* when two racks are used together T shape for Lower and L for the upper rack

NOTE BG, BH, and Bi are only included when Folding Side Tables are ordered quantities shown are for 2

Tools needed:


#3 Phillips Screwdriver

3/16" Allen Wrench

7/16" open end wrench

ATTACHING RACKS TO NOMAD CART

ITEM	PART NAME	DISCRIPTION	QUANTITY
5N	TOP PIN PLATE	"L" PLATE	4 PER RACK
6N	LOWER PIN PLATE	"T" PLATE	4 PER RACK
5o	GUIDE PLATE	RECTANGLE	4 PER RACK
5p	GUIDE PLATE BOLT	Steel Socket Head Screw, 1/4"-20 Thread Size, 1-1/2" Long	2 PER GUIDE PLATE
5r*	RACK ATTACHMENT BOLT	Pan Head Phillips Screw, 1/4"-20 Thread, 1-1/2" Long	1 PER PIN PLATE
5Q	GUIDE PLATE AND RACK ATTACHMENT NUT	Steel Flange Nut, 1/4"-20 Thread Size	3 PER PIN PLATE

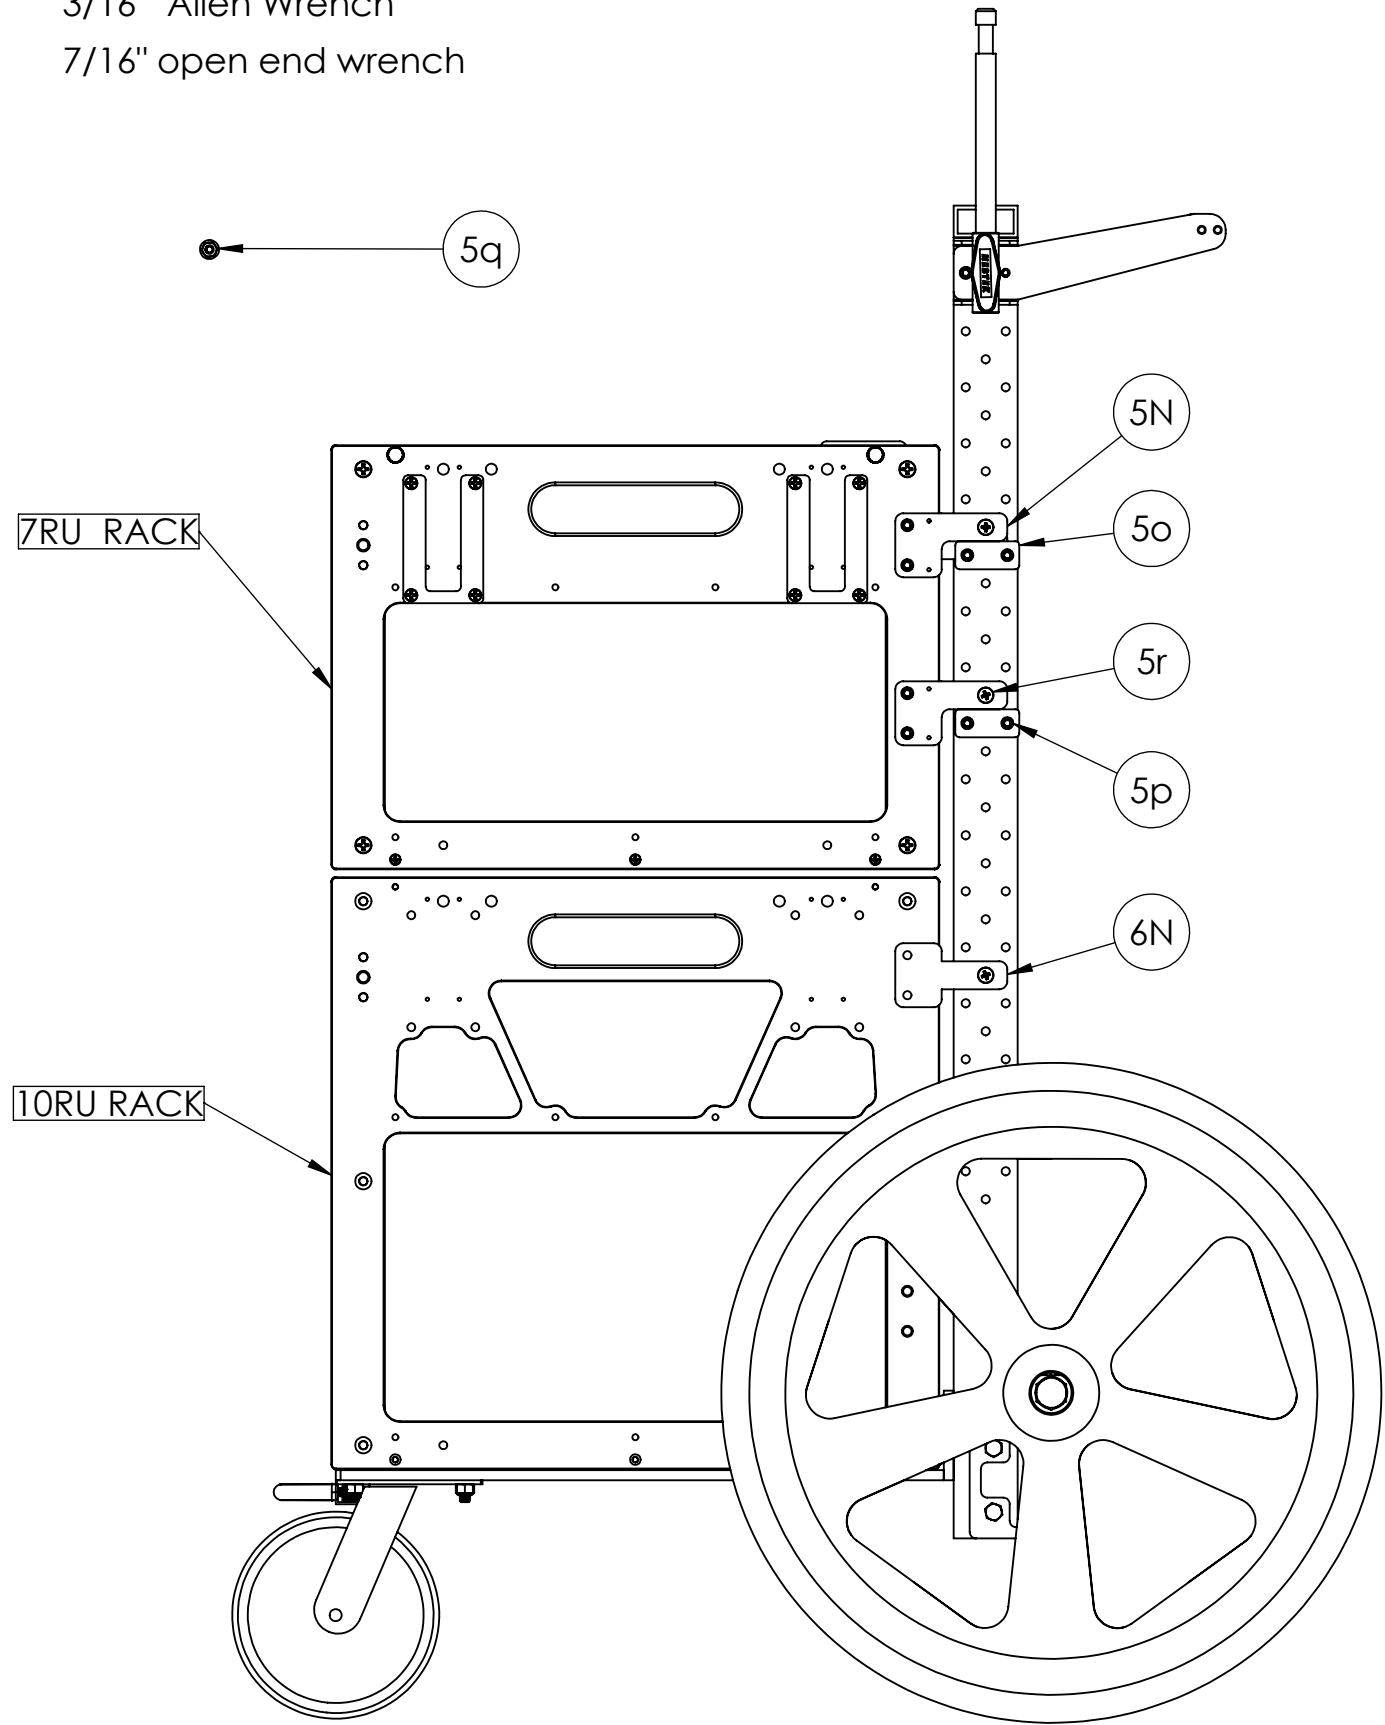

Step 1. Set the lower rack on Nose Plate. Note that this rack whether it is a 7Ru or 10Ru should be outfitted with part 6N the lower rack pin and only the top set is needed. Bolt in place using 5r and 5Q Flange Nut on each side.

Step. 2. Set the top rack, outfitted with part 5N the top rack pin in all 4 positions. Determine the center holes on Noman side rails that are closest to alignment and bolt a 5o guide plate in place in the two holes directly below those holes using 5p Guide plate bolt and 5Q Flange Nut repeat on all four.

Step 3. Place the top rack gliding the rack pins on the guide plates and once aligned to the center rail holes bolt with 5r and 5Q Flange Nut repeat on all four.

* IF you plan on taking off and on the top rack often part 5r bolt and flange nut can be replaced with a 1/4" with 1-1/2" usable lenght quick relese pin.